

## Operating instructions



Homebutton

- Activate the Homebutton (pic.1) with 2 fingers for at least 2 seconds to open the iPad™ intake section. The iPad™ intake now automatically moves 20° to the 'open' position.
- The iPad™ intake remains in the open position for 10 seconds, and then closes automatically.
- If the mechanism senses resistance while closing, the iPad™ intake opens automatically to prevent injuries and damage to the device.
- If there is power loss or power failure, the iPad™ intake opens automatically to enable the iPad™ to be accessed for continued use.

There are several setting options that can be set with the Dip switch at the back of the iDock. For details on settings – see the assembly and mounting instructions on pages 8 and 9.

### IMPORTANT! Protection against theft

iRoom's iDock DOES NOT PROVIDE ANY PROTECTION against theft. Unauthorised forceful removal of an iPad™ cannot be prevented. iRoom GmbH shall accept no liability whatsoever for the theft of iPads!

### Safety instructions

- Protect the device from fluids to avoid damage caused by fire or electric shocks!
- The device must not be subject to maintenance by users! Installation and deinstallation must be conducted by certified electricians technicians!
- Do not put any foreign bodies into the device!
- Should any fluids or objects enter or fall into the device, or should the device become damaged, disconnect the device from the power supply immediately!

The iRoom iDock Landscape has a smooth and shiny surface which is prone to scratches. Handle all parts with care to avoid damage. Do not clean with liquids or fluids.



Homebutton

If you have any questions, please contact your iRoom dealer or go to our website: [www.iroomsdock.com](http://www.iroomsdock.com)